

Inflatable Marine Products Inc.

OWNERS MANUAL

Wolf Cub/Predator/Survivor

**Your SeaWolf Inflatable is a “performance watercraft”.
Please use caution when running this craft. Be sure to respect
all water safety laws for your state or country AS WELL AS
THE RESPECT FOR FELLOW BOATERS, SWIMMERS
AND ALL WATER ACTIVITIES .**

**You must remain seated at all times while this craft is in
motion.**

Stay clear of the outboard and spinning propeller.

Table of contents

Page

3	Getting started
4	Parts list
5	Assembly
7	Maintenance (Care of your SeaWolf Inflatable)
8	Registering, Your Inflatable (FOR WATER USE IN YOUR STATE)
9	Specification
10	Technical Support

Getting Started

CAUTION!

Your SeaWolf Inflatable is a “performance watercraft”. Please use caution when running this craft. Be sure to respect all water safety laws for your state or country AS WELL AS THE RESPECT FOR FELLOW BOATERS, SWIMMERS AND ALL WATER ACTIVITIES.

You must remain seated at all times while this craft is in motion.

Stay clear of the outboard and spinning propeller. Never enter or exit your boat from the rear!

BE A SAFE BOATER AND STAY ALIVE!

PARTS LIST

SeaWolf Inflatable Standard Equipment.

Wolf Cub//Predator/Survivor

1 Inflatable Hull

Floor Boards

Wolf Cub 2 pieces

Predator, and Survivor 3 pieces

Aluminum floor joiners

Wolf Cub 2 pieces

Predator, and Survivor 3 pieces

Foot or hand straps (unattached)

Wolf Cub 2 pieces

Predator, and Survivor 3 pieces

1 Registration Kit (optional)

1 Dual action Bravo Hand Pump

1 Small puncture repair kit

Warranty / Registration card

Assembly

Wolf Cub/Predator/Survivor.

STEP 1. Insert rear floor board

STEP 2. Insert front floorboard

(place aluminum H sections over the ends of both back and front boards)



STEP 3, 4 and 5: Insert middle section, join with floor joiners and press down. Place the edge of the floorboard down under the floor rubber as shown along both sides of boat.



Step 6: Inflate using pump included to 6 PSI



Outboard Installation

WARNING!

Be sure to bolt your motor in place.

The transom is designed to accommodate the Nissan & Mercury line of Outboards. However other outboards can still be mounted. Some minor modifications may be necessary to ensure proper installation. If you are not using Nissan outboards please feel free to contact our toll free technical service at: 1-877-937-8270.

Place your outboard on the transom plate centered.

You may want to raise and lower your outboard for better performance depending on the water conditions.

If the water is rough, position your outboard in the lowest position possible. Flat water may require a higher setting to get the desired performance.

If additional adjustment is desired, be sure that the water pickup is still getting water to ensure proper outboard cooling. Be sure to drill holes through the plate too securely attach the outboard. For remote steering outboards, please consult a dealer near you for proper installation.

MAINTANENCE

Care of Your SeaWolf Inflatable

Your new SeaWolf Inflatable is built with only the finest in materials. The hull material is PVC and has been treated with UV protection at the factory. You inflatable is manufactured to handle both fresh and salt water. Be sure to follow the below instructions to ensure a long life for your inflatable.

NEVER WASH YOUR INFLATABLE WITH;

- **A CLEANER CONTAINING BLEACH**
- **MEK OR ACID TONE**
- **GASOLINE**
- **PAINT OR LAQUER THINER**
- **WD-40 OR ANY OTHER OIL**

Prior to using it may be good to apply an inflatable boat protectant (contact dealer).

Use soap and water to remove all loose dirt after using. For tough stains please contact your nearest Inflatable dealer for options. If you plan to leave your inflatable in the water for extended periods of time, you should consider bottom paint. (See Dealer) Try to keep your inflatable covered from the direct sun for extended periods of time, as anything UV protected it will eventually start to dry and fade. It is recommended that you add UV protection after washing with any tough staining removing product and at least 1 time per month during the hot summer.

STORAGE

Prior to storing your inflatable for the winter or for whatever reason, you must first remove the floors. Clean and dry the boat completely. Roll it up if you wish. It is not important to keep it warm but if it does get cold, **DO NOT ATTEMPT TO UNROLL IT OR MOVE IT AROUND.** Keep it in an out of the way place to ensure that it does not get damaged. When PVC gets cold it may crack. It is made of plastic. Allow it to warm to at least 50 degrees before attempting inflation after the cold winter.

***CONTACT YOUR DEALER FOR MOTOR
MOUNTING INSTRUCTION***

INFLATABLE BOAT Graphics

Call Toll Free 1-877-937-8270

Are you looking for a way to add registration numbers, boat names or graphics to your Inflatable Boat?

If So,

Like all inflatable owners you are limited to a few choices

Tie on a board.

Magic markers.

the current best is

Inflatable Paint!

It's Messy, and Expensive, ... it runs, rubs off, smears, scratches, and quickly fades.

FINALLY!

A Patented Procedure

FOR INFLATABLE BOAT LETTERING

Material and quality, That will last as long as your boat!

Registration Numbers

\$99.95 (Add \$5.00 for shipping)

Quick and easy installation

**To place your order call Toll Free;
1-877-937-8270**

Allow 7-10 working days for delivery.

24 HOUR EXPRESS DELIVERY AVAILABLE
(ask for details)

**Sorry,
No C.O.D orders.**

**To place your order call Toll Free;
1-877-937-8270**